

## BATERIE TRX PRO SAMSUNG 1400 MAH



Cena celkem:	<b>183 Kč</b> <b>(bez DPH: 151 Kč)</b>
Běžná cena:	<b>201 Kč</b>
Ušetříte:	<b>18 Kč</b>
Kód zboží:	BATRX7130
Part No.:	TRX-CGA-S005
Záruka:	12 měsíců/6 měs. akku
Stav:	Nové zboží

### Popis

#### TRX pro Samsung 1400 mAh

Kompatibilní baterie pro fotoaparáty vybraných výrobců.

#### ZÁKLADNÍ SPECIFIKACE

**Kapacita:** 1400 mAh

**Technologie baterie:** Li-iontová

**Nahrazuje baterie:** LEICA BP-DC4-E , LEICA BP-DC4, LEICA BP-DC4-J, LEICA BP-DC4-U, PANASONIC CGA-S005, PANASONIC CGA-S005A, PANASONIC CGA-S005A/1B, PANASONIC CGA-S005E, PANASONIC CGA-S005E/1B, PANASONIC DMW-BCC12, FUJIFILM NP-70, PENTAX D-LI106, SIGMA BP-41

#### Pro fotoaparáty

##### Panasonic:

DMC-FS2, DMC-FX01, DMC-FX01-A, DMC-FX01BB, DMC-FX01BS, DMC-FX01EB-K, DMC-FX01EB-S, DMC-FX01EB-W, DMC-FX01EF-A, DMC-FX01EF-K, DMC-FX01EF-S, DMC-FX01EF-W, DMC-FX01EG, DMC-FX01EG-A, DMC-FX01EG-K, DMC-FX01EG-S, DMC-FX01GK, DMC-FX01-K, DMC-FX01-P, DMC-FX01-S, DMC-FX01-W, DMC-FX07, DMC-FX07EF, DMC-FX07EF-S, DMC-FX07EG, DMC-FX07EGM, DMC-FX07K, DMC-FX10, DMC-FX10A, DMC-FX10EB-K, DMC-FX10EB-S, DMC-FX10EF-S, DMC-FX10EG, DMC-FX10EG-A, DMC-FX10EG-S, DMC-FX10P, DMC-FX10S, DMC-FX100EF-K, DMC-FX100EF-N, DMC-FX100EF-S, DMC-FX100EG, DMC-FX100EG-K, DMC-FX100EG-S, DMC-FX100GK, DMC-FX12, DMC-FX12EB-K, DMC-FX12EB-S, DMC-FX12EF-S, DMC-FX12EG, DMC-FX12EG-K, DMC-FX12EG-S, DMC-FX12GK, DMC-FX12K, DMC-FX12S, DMC-FX150, DMC-FX150EFK, DMC-FX150K, DMC-FX150S, DMC-FX180, DMC-FX180GK, DMC-FX180K, DMC-FX180N, DMC-FX180S, DMC-FX3, DMC-FX3EF, DMC-FX3EF-S, DMC-FX3EG, DMC-FX3EGM, DMC-FX3EG-S, DMC-FX3K, DMC-FX3S, DMC-FX50, DMC-FX50EF, DMC-FX50EG, DMC-FX50EGM, DMC-FX50K, DMC-FX8, DMC-FX8-A, DMC-FX8BS, DMC-FX8EBB, DMC-FX8EG-A, DMC-FX8EG-K, DMC-FX8EG-P, DMC-FX8EG-S, DMC-FX8GK, DMC-FX8GN, DMC-FX8-K, DMC-FX8-P, DMC-FX8-S, DMC-FX9, DMC-FX9BB, DMC-FX9BS, DMC-FX9EB-K, DMC-FX9EBS, DMC-FX9EB-S, DMC-FX9EF-K, DMC-FX9EF-S, DMC-FX9EG, DMC-FX9EG-K, DMC-FX9EG-R, DMC-FX9EG-S, DMC-FX9GK, DMC-FX9GN, DMC-FX9-H, DMC-FX9-K, DMC-FX9-R, DMC-FX9-S, DMC-LX1, DMCLX1BS, DMC-LX1EG-K, DMC-LX1EG-S, DMC-LX1GK, DMC-LX1GN, DMC-LX1-K, DMC-LX1K-B, DMC-LX1-S, DMC-LX1S-B, DMC-LX2, DMC-LX2EF, DMC-LX2EF-S, DMC-LX2EG, DMC-LX2EG-K, DMC-LX2EGM, DMC-LX2EG-S, DMC-LX2K, DMC-LX2S, DMC-LX3, DMC-LX3EF-K, DMC-LX3GK, DMC-LX3K, DMC-LX3S, DMC-LX9

##### Fujifilm:

Finepix F20, F40fd, F45fd, F47fd

##### Leica:

C-LUX1, Leica D-LUX2, Leica D-LUX3, Leica D-LUX4

**Ricoh:**

Caplio GX100, R3, R30, R4, R40, R5, GR Digital, GR, GR Digital II, GR Digital III, GR Digital IV, GX200, G600, G700, G700SE

**Pentax:**

MX-1, Pentax X90

**Sigma:**

DP1 Merrill, Sigma DP2 Me, Sigma DP3 Merrill

**Samsung:**

HMX-R10, Samsung HMX-R10BP, Samsung HMX-R10EDC, Samsung HMX-R10SP